




Handleiding/ Manuel d'installation  
INSTRUCTION MANUAL  
-Swing Gate with motor

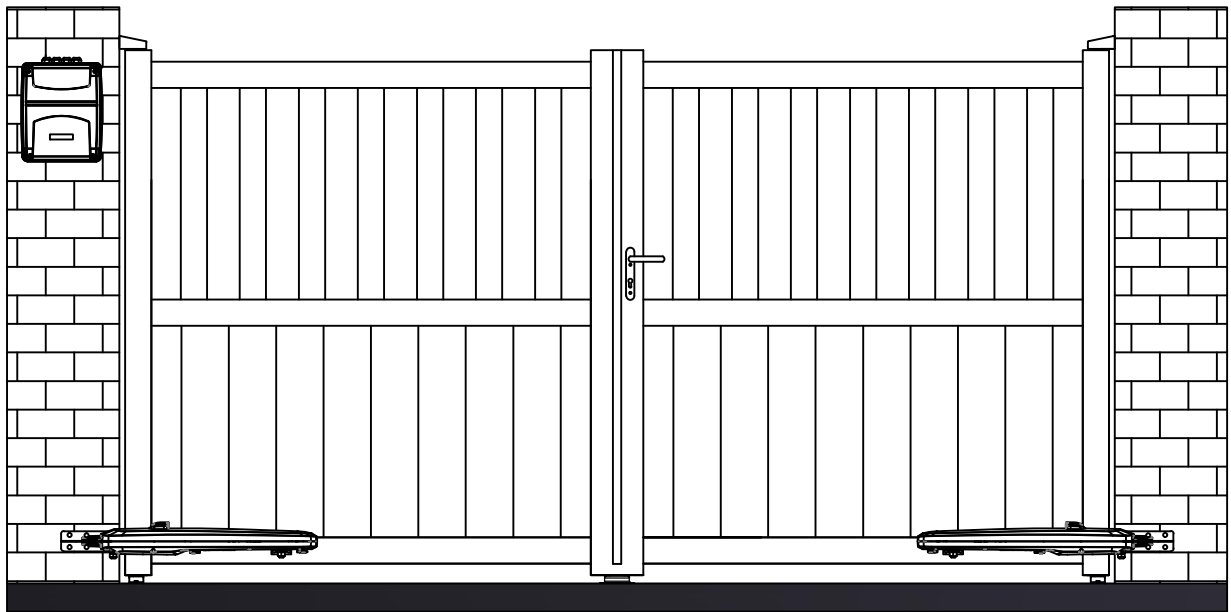

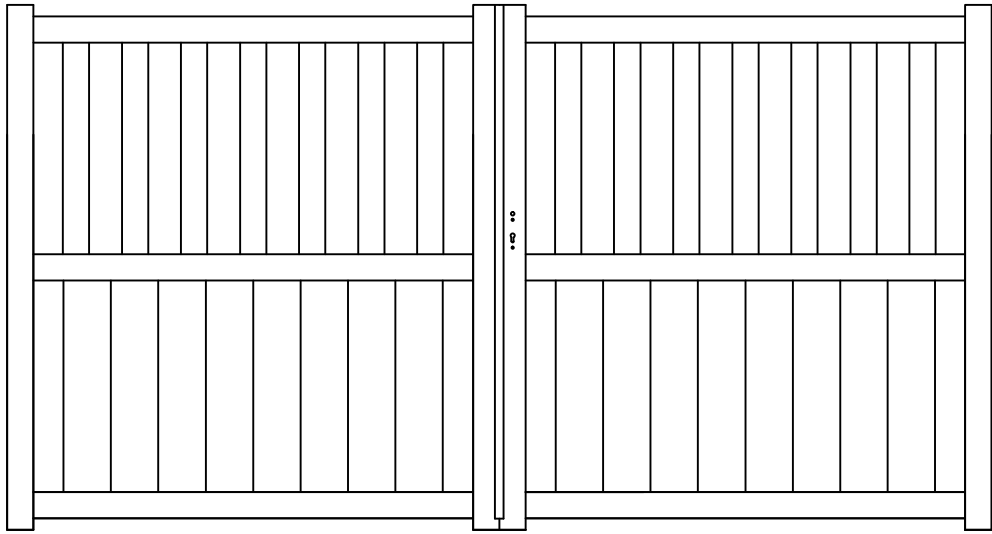


[1]\*1


[2]\*1

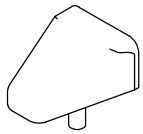


[3]\*2

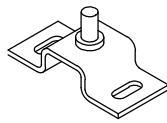


[4]\*2

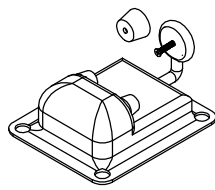

[5]\*1

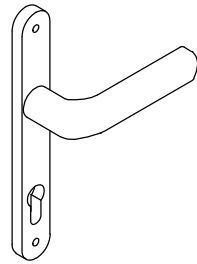


[6]\*2

 

[7]\*1



 [8]\*1



[10]\*12




[11]\*2




[12]\*4



[13]\*1

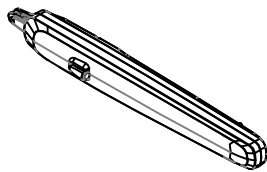

[14]\*2

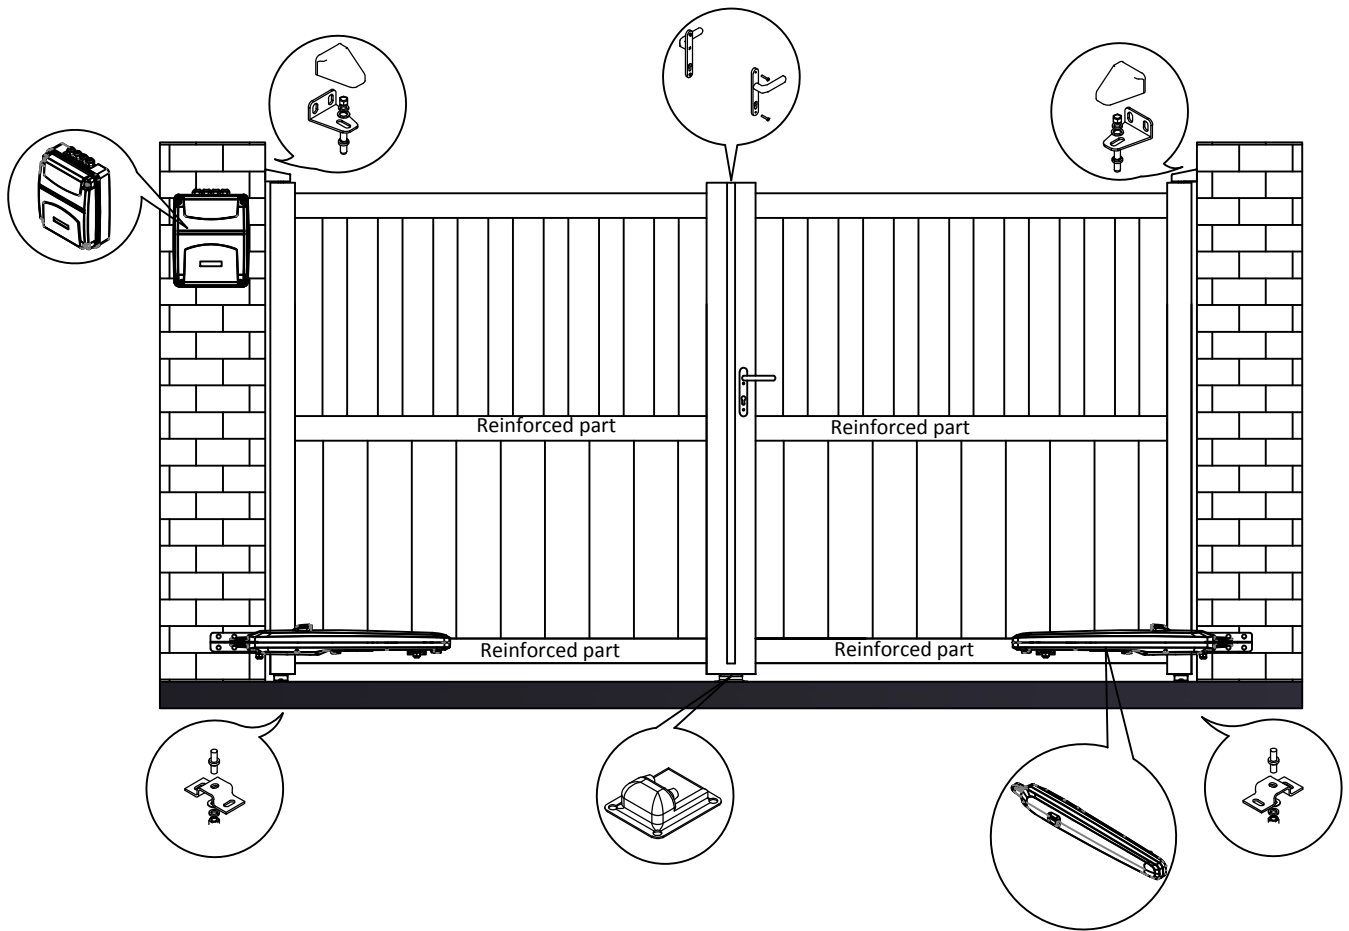

Motor arm needs to be installed on the reinforced part.

